



DULAP NOVI

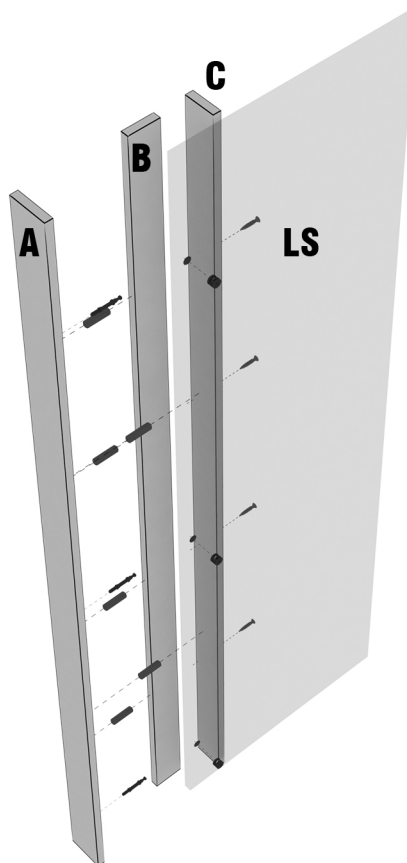

1. Se monteaza pe A, 3 suruburi T (kit demontabil) si 2 cepi de lemn (G)
2. Se introduc cele 3 T in LS cu sageata indreptata spre A
3. Se strang cu surubelnita cele 3 T montate pe LS cu A
4. Se ataseaza B la A prin 4 cepi lemn (G)
5. Se ataseaza C la B prin 4 x D2
6. Se procedeaza identic si pentru laterala dreapta (LD)



7. Se prind LS de LC prin P1 si P2 utilizand 8 x C5
8. Se prind LD cu (pas 7) prin P3 si P4 utilizand 8 x C5
9. Se prinde V2 de P4 prin 2 cepi lemn (G)
10. Se prinde V1 de P3 prin 2 confirmatoare (C5)
11. Se ataseaza fundul (F) de LS si LD prin 3 x 2 x C7
Se prinde F de LC, V2 prin 2 x 2 x C5
12. Se ataseaza tavan (T) prin 3 x C5 de LS, LD si 2 x C5 de LC si V1


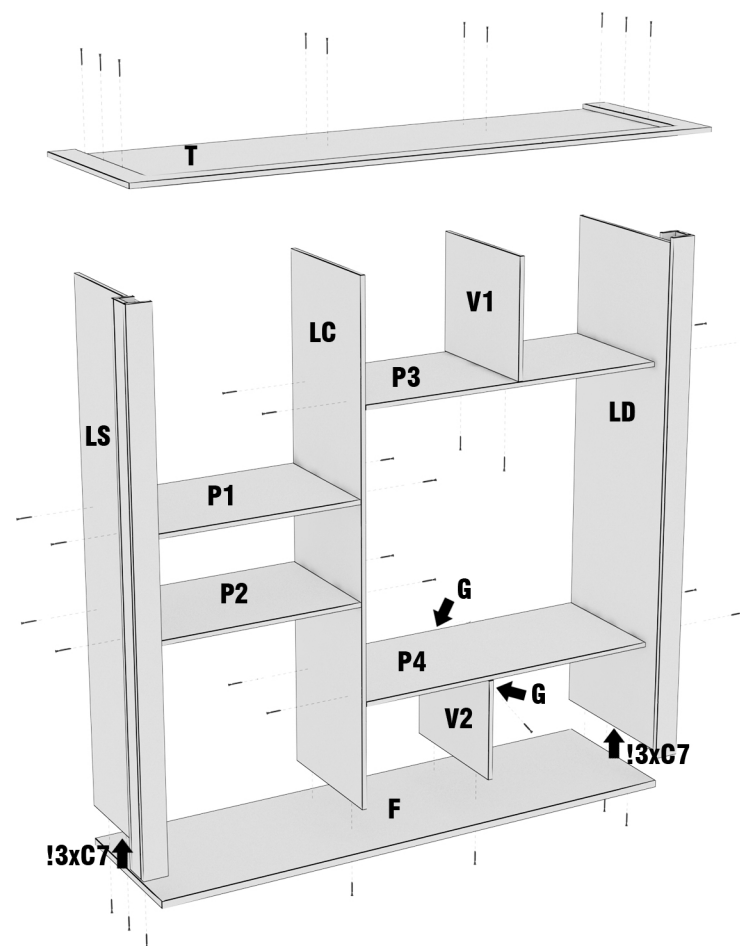


Montajul necorespunzator atrage dupa sine **PIERDEREA GARANTIEI!**

- 13. Se fixeaza bara pentru haine, prin BH
- 14. Se fixeaza SG-S si SG-I prin 2 x 6 x surub D4
- 15. Se fixeaza politele mobile (PM) prin 8 x SP
- 16. Se prind glisierile de LD si V2 cu D



SG-I se prinde la o distanta de **30mm** fata de cantul dulapului
 SG-S se prinde la o distanta de **90mm** fata de cantul dulapului

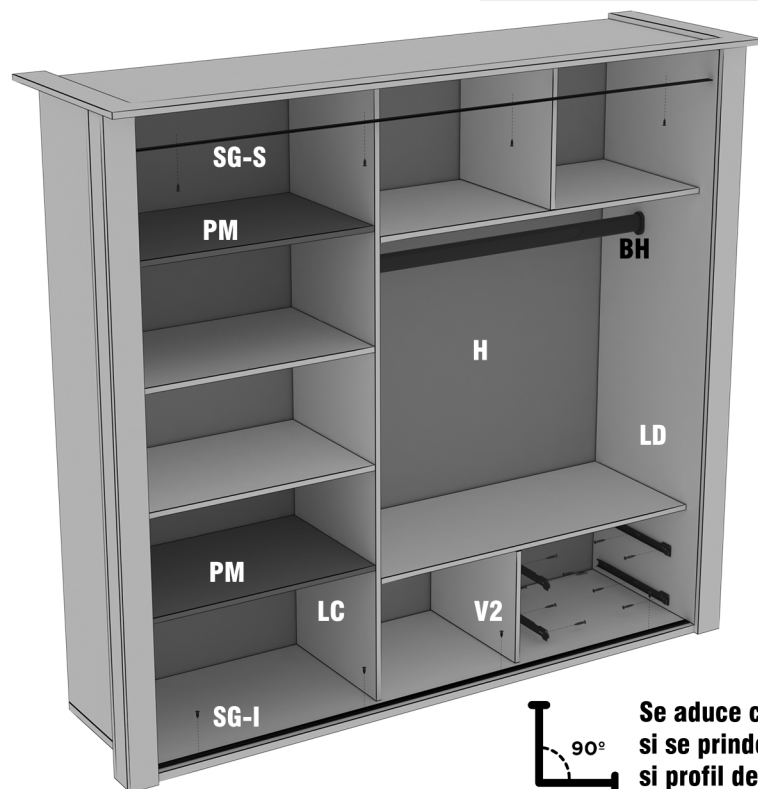


Se aduce corpul la vinclu de 90 grade si se prinde spatele (H) din HDF cu C9 si profil de imbinare HDF

- 17. Se fixeaza T0 de tavan prin 4 confirmatoare C5
- 18. Se fixeaza talpile alunecatoare cu 2 x 5 x D
- 19. Se insereaza sertarele



MONTAJUL SERTARELOR

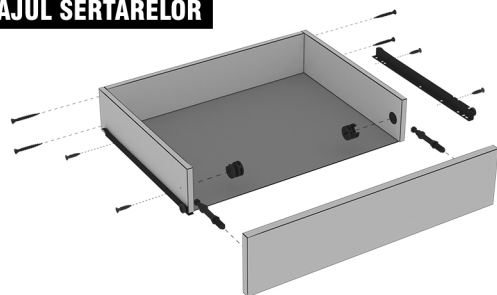

1. Se monteaza glisierile pe laterale cu D
2. Se leaga lateralele cu spatele sertarului prin 4 x D3
3. Se leaga lateralele cu frotul de sertar prin 2 x T
4. Se aduce sertarul in vinclu de 90 grade si se prinde HDF cu C9

Montajul necorespunzator atrage dupa sine **PIERDEREA GARANTIEI!**