

MOBIRO.

Instructiuni de Montaj

Corp polite



Montajul necorespunzator atrage dupa sine pierderea garantiei.

Unelte Necesare:



Surubelnita




Ciocan



Imbus



Se recomanda montarea produsului in minim doua persoane.


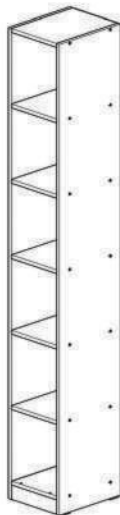


Denumire	Dimensiune	Cantitate	Simbol
Reper Inferior	248X336	1	RI
Reper Superior	248X336	1	RS
Laterale	1948x336	2	L
Polita fixa	248X336	5	PF
Plinta	248x62	1	P

CU		55	CF		30	TA		4	S6		4
S3		8									

1 Ansamblare

Se prind cu confirmatoare (CF) toate politele fixe (PF) de laterale(L).
Plinta (P) se va prinde cu confirmatoare (CF) de reperul inferior (RI).

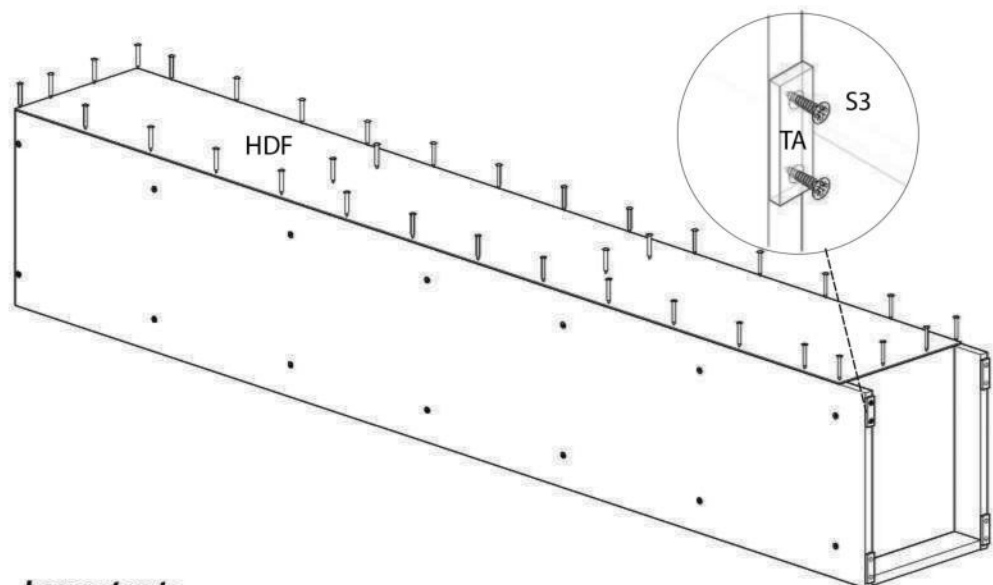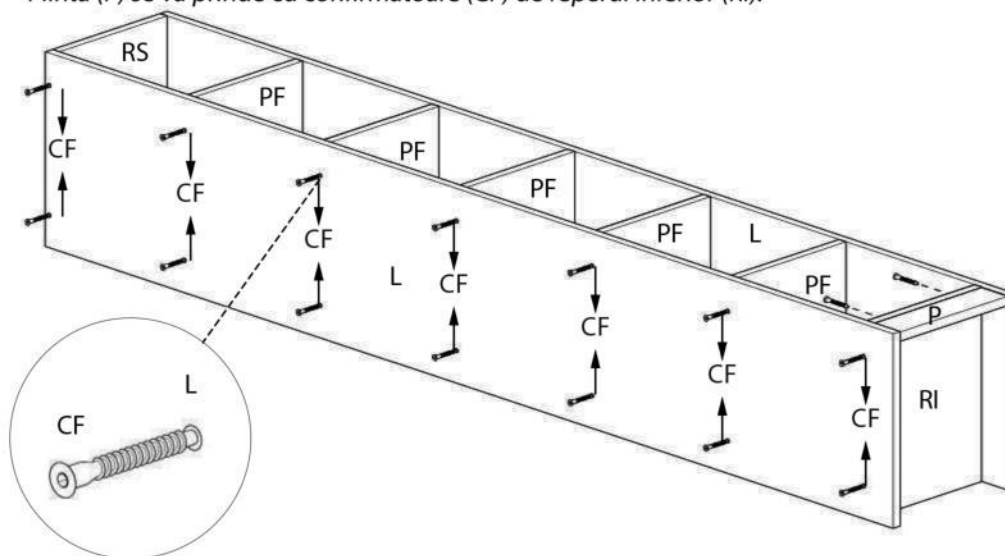

Important:

Inainte de a prinde HDF-ul se va folosi o ruleta pentru a aduce in vinclu, corpul. HDF-ul se va fixa cu cuie (CU) pe laterale(L), reper inferior (RI), reper superior (RS) si pe doua polite fixe (PF).

Talpele alunecatoare (TA) se fixeaza cu surub 3,5x16. (S3)

Suruburile 3,5x30 (S6) se folosesc pentru cuplarea a doua corpuri din aceeasi gama.